


## Instruction of sensor - version BELL




### Technical details:

Supply voltage:	12/24V DC
Transmitter:	12/24V 1A (max)
Temperature range:	-20 to + 50 degrees Celsius
<b>Turning off the sensor</b> press the sensor for 30sec (until button of the sensor turns off).	
<b>Turning on the sensor</b> - repeat steps above (press until the sensor turns on)	

Configuration	Time of pressing the sensor	Sensor signal	Handle's reaction	Examples of using
<b>1 1 1 A BELL</b>	1sec - no longer than 3 sec	po rozpoznaniu palca - zgaśnięcie sensora	on the control cable (green) remains Positive potential -3sec	Door bell control

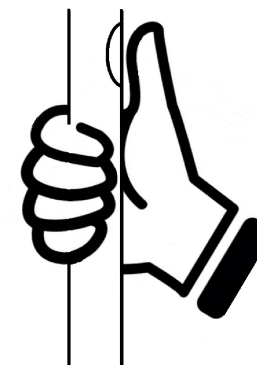


Color of wires:

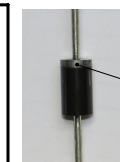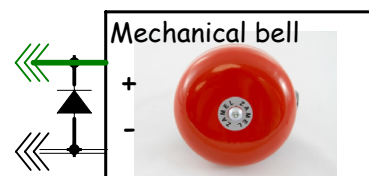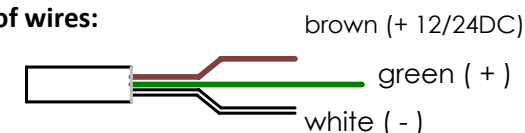

Silver strap shows +

When using mechanical ringer, connect the rectifier diode to the joints of power supply coil.

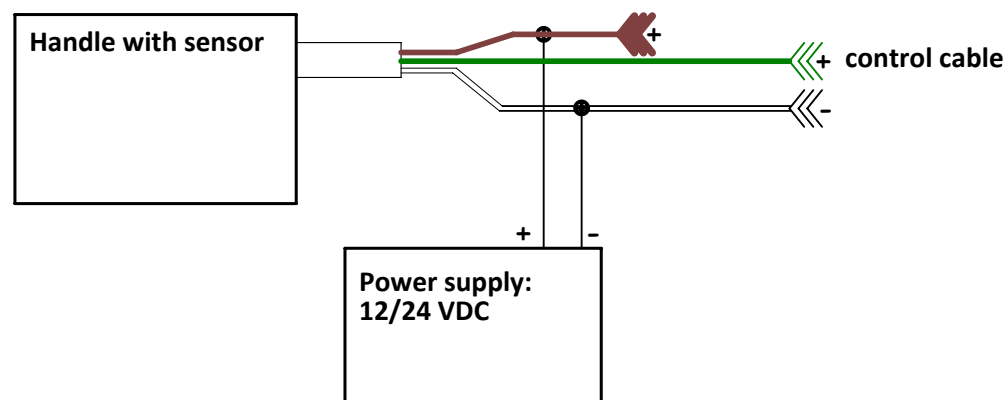

**!!WARNING!! Installation should be done by qualified electrotechnician according to IEC 364 and EN 60204-1 or VDE !!!**