





SZABLON DO WIERCENIA OTWORÓW *DRILLING PATTERN*



ZAWIASY ROLKOWE PCV WRVP
ROLLER HINGES PCV WRVP

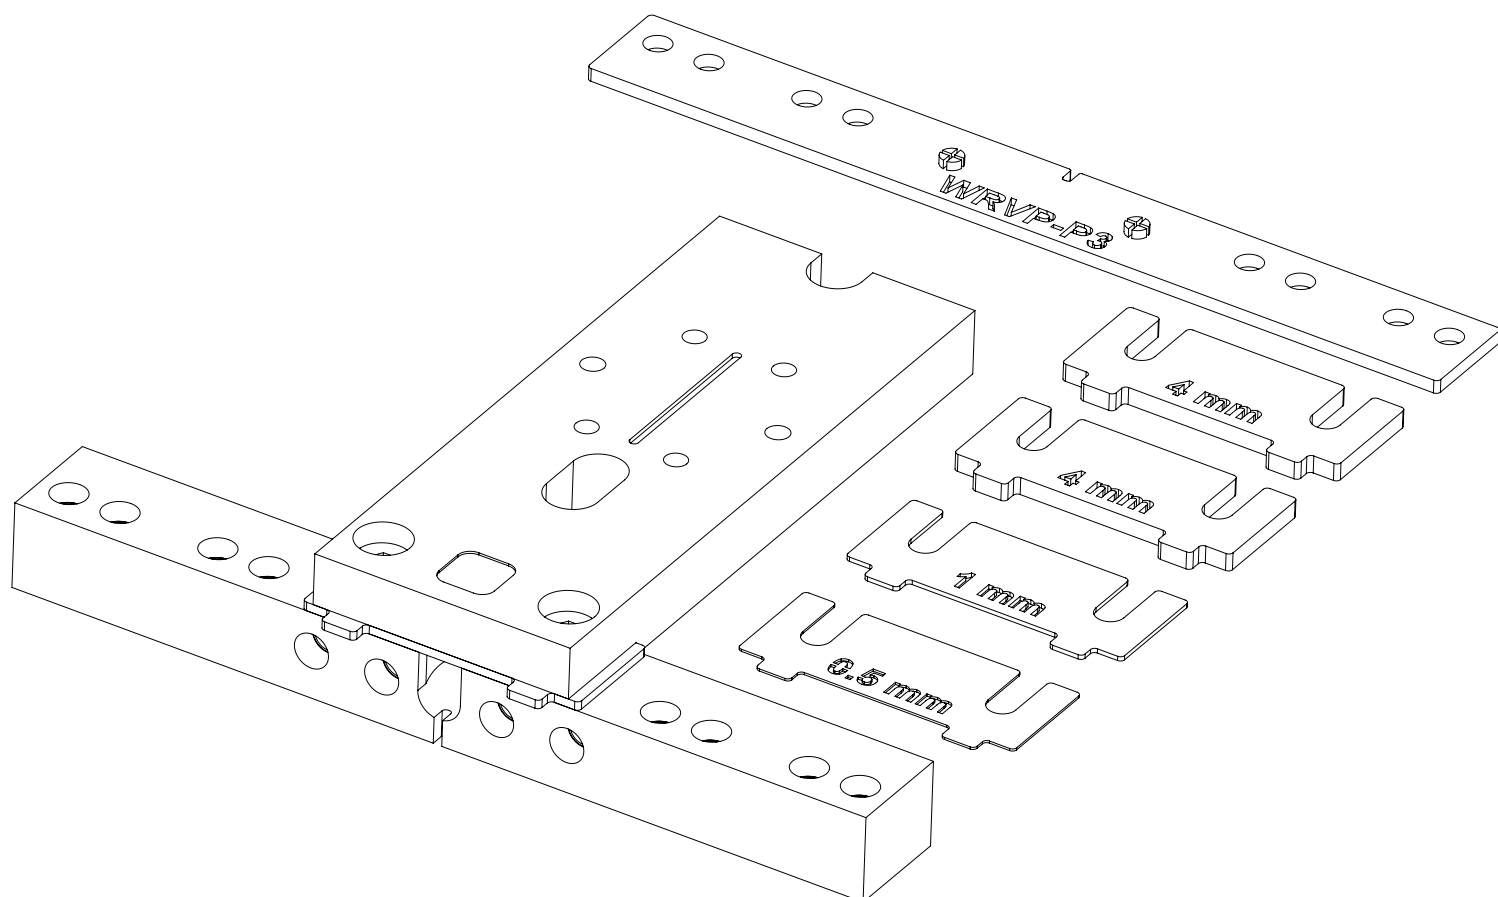

Wiercenie w skrzydle drzwiowym i ościeżnicy:
Drilling in the door sash and frame:

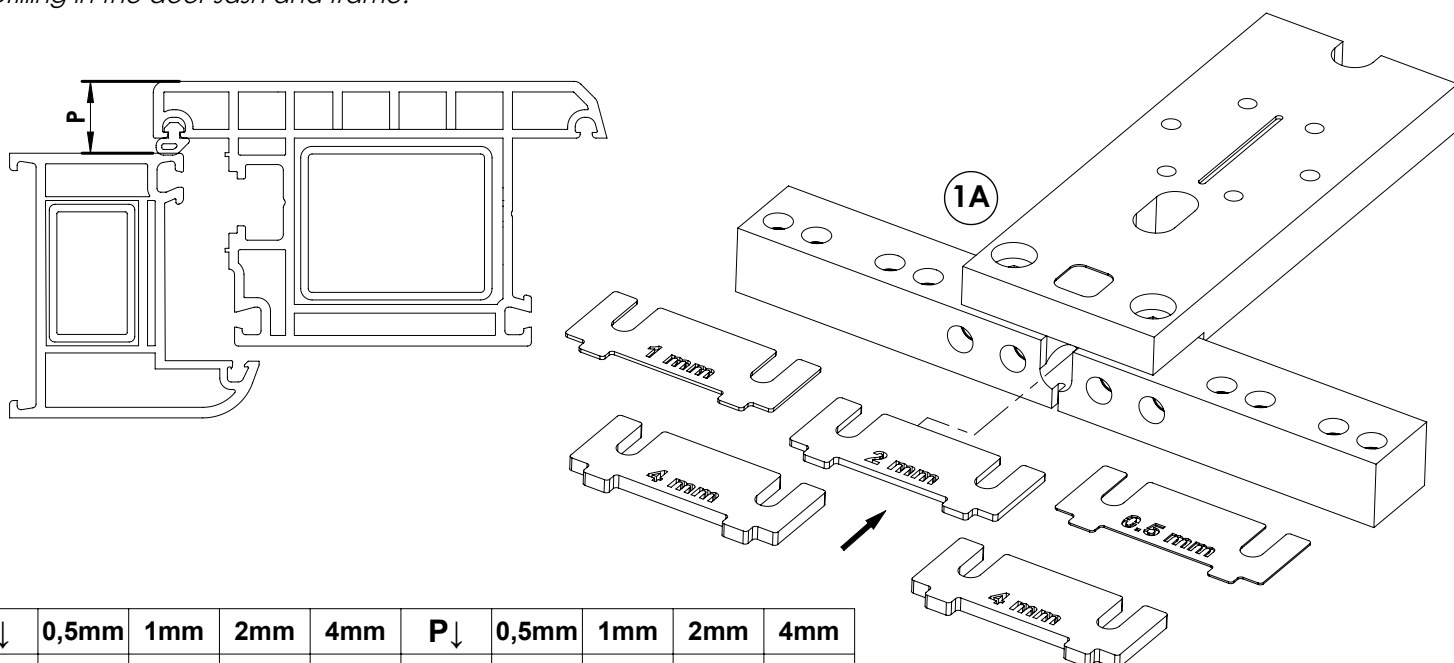

P↓	0,5mm	1mm	2mm	4mm	P↓	0,5mm	1mm	2mm	4mm
17	-	-	-	-	17,5	1x	-	-	-
18	-	1x	-	-	18,5	1x	1x	-	-
19	-	-	1x	-	19,5	1x	-	1x	-
20	-	1x	1x	-	20,5	1x	1x	1x	-
21	-	-	-	1x	21,5	1x	-	-	1x
22	-	1x	-	1x	22,5	1x	1x	-	1x
23	-	-	1x	1x	23,5	1x	-	1x	1x
24	-	1x	1x	1x	24,5	1x	1x	1x	1x
25	-	-	-	2x	25,5	1x	-	-	2x
26	-	1x	-	2x	26,5	1x	1x	-	2x

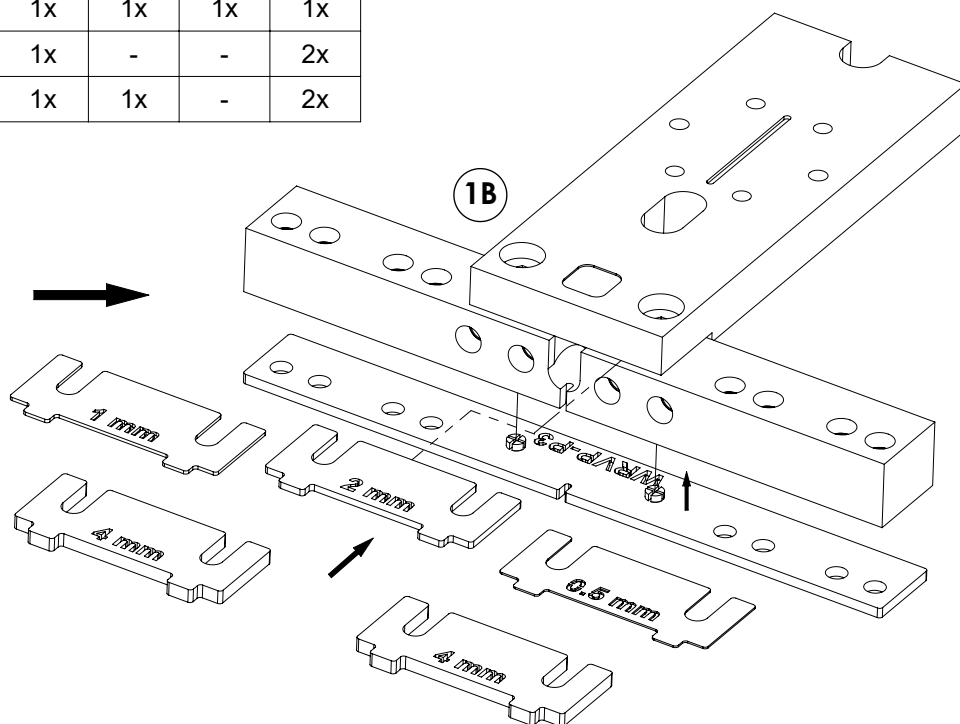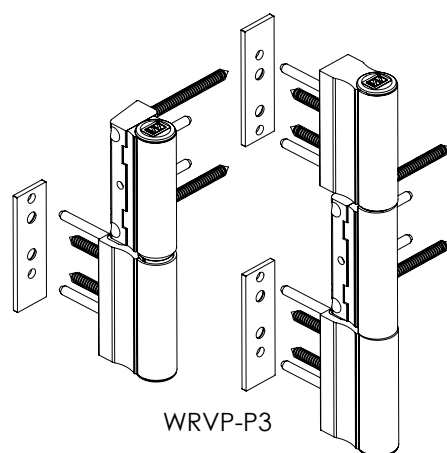

Dla zawiasów **WRVP-P3**:
For hinges **WRVP-P3**:

P↓	0,5mm	1mm	2mm	4mm	P↓	0,5mm	1mm	2mm	4mm
21	-	1x	-	-	21,5	1x	1x	-	-
22	-	-	1x	-	22,5	1x	-	1x	-
23	-	1x	1x	-	23,5	1x	1x	1x	-
24	-	-	-	1x	24,5	1x	-	-	1x
25	-	1x	-	1x	25,5	1x	1x	-	1x
26	-	-	1x	1x	26,5	1x	-	1x	1x



